




双管黑气喇叭说明书

Carfka 12v Train Horn

Install Instructions

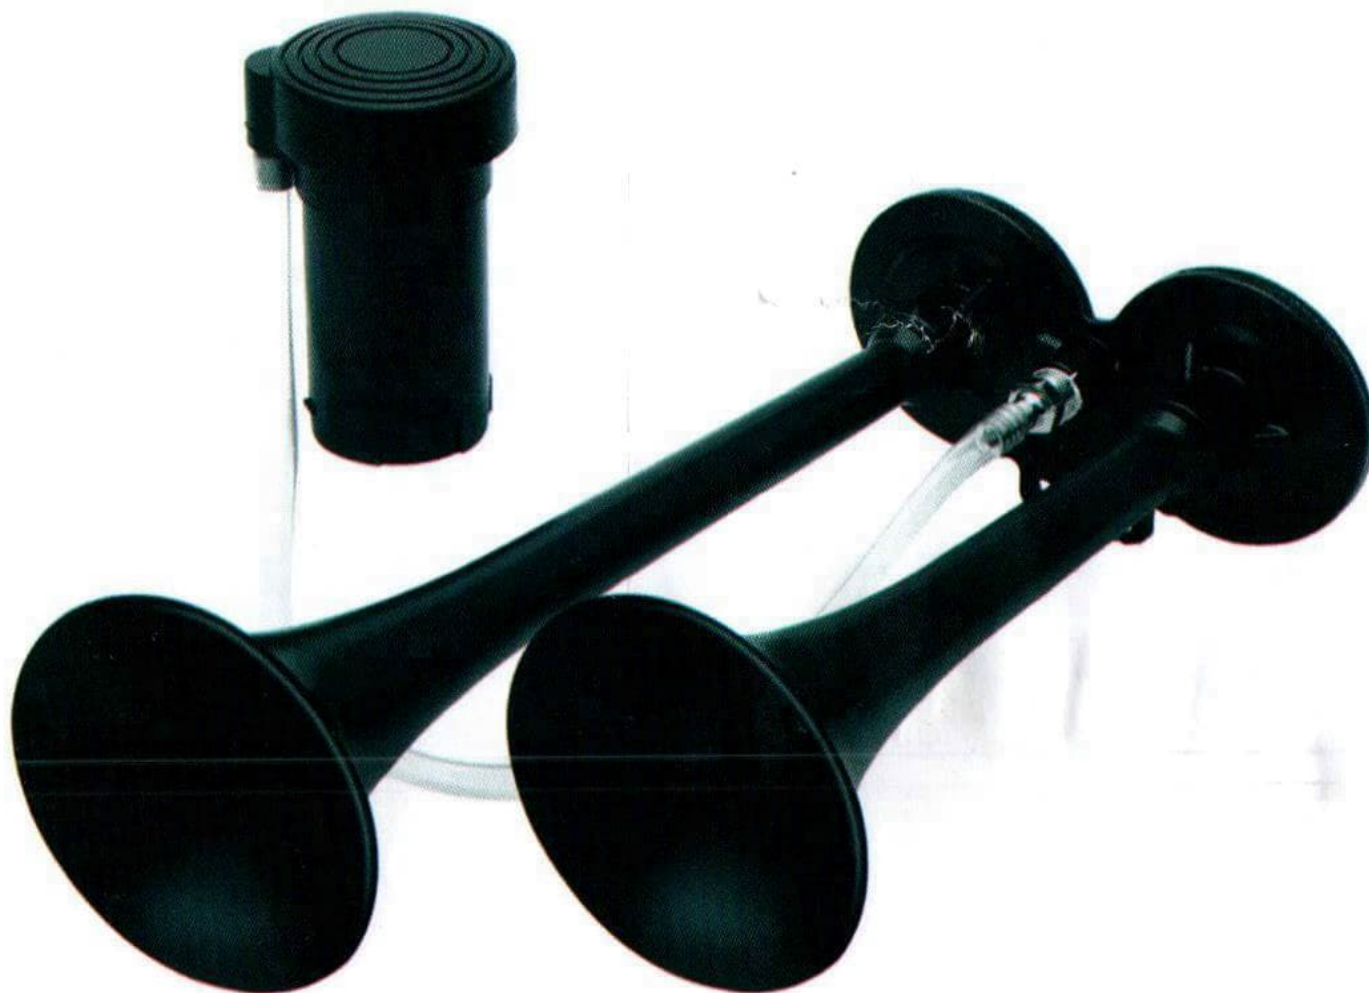

If you have any questions or concerns,
please reach out to us at **stservice03@163.com**
We hope you enjoy your new train horn!

Package Contents:

1. Air Horn for 12v Vehicles
2. Air Compressor
3. Air Hose
4. Set of Mounting Hardware
5. Relay & Wired Relay Plug
6. Fuse & Inline Fuse Holder
7. Manual

Specifications:

Material: Chrome plated ZINC trumpet(non-rusting)

Sound: 150 db

Length: 17.7 inches

Weight: 2.35 lbs

Relay: 12v 40A

Getting Started:

1. Install the air horn and compressor

1.1 connect the air horn(single trumpet or dual trumpet) and the compressor with the hose.

1.2 Install the air horn and the compressor in a place that far away from car engine. Please make sure the compressor is mounted in a vertical position and incline the air horn slightly.

1.3 Use the separate black wire to connect negative pole of the compressor to the ground or negative pole of the battery, the positive pole to yellow wire(87)

2.Wiring instructions.

87(Yellow wire) to the positive pole of the compressor.

86(White wire) to the original horn wire.


85(Blue wire)to your original horn wire.

30(Red wire) to the positive pole of your battery.

There are two ways to connect for relay control wire

a.85 and 86 wire doesn't need to distinguish positive and negative the stock horn line, if there is only one horn line, connect another to ground.

b.If you want to add a switch, connect the white wire to negative pole, then connect the blue wire and switch to positive pole.

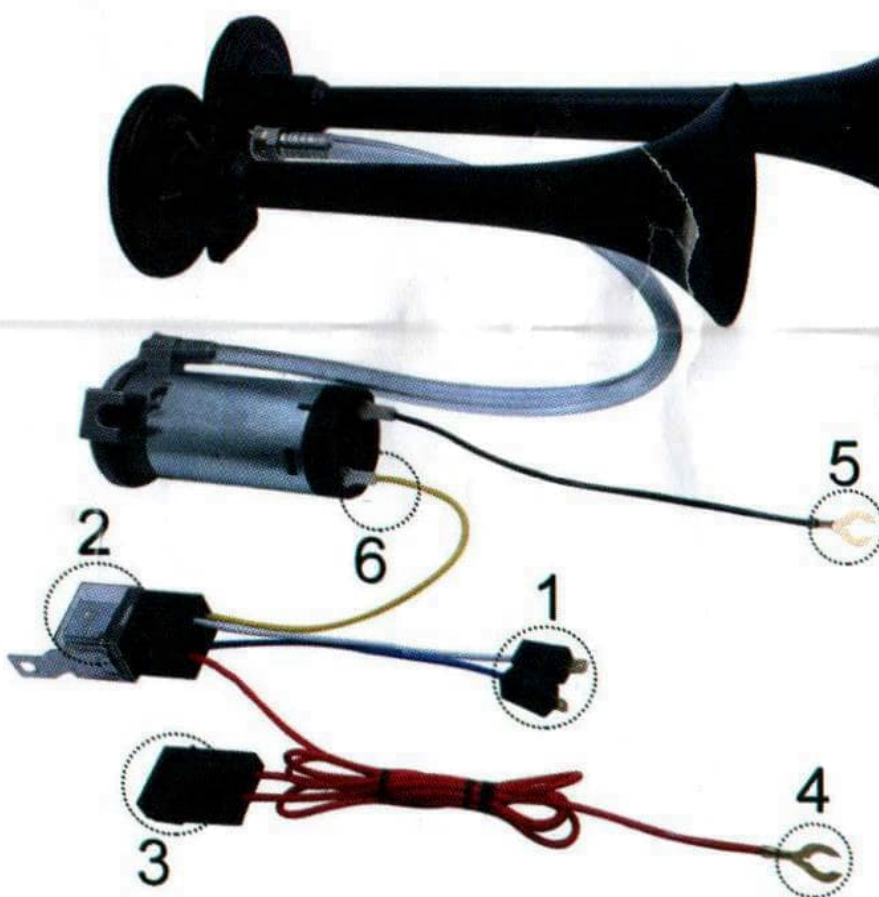

1.connect to original horn Wire

2.12V 40A Relay

3.30A fuse

4.red wire connect to positive pole of battery

5.black wire to negative of compressor and negative of battery or ground

6.yellow wire to positive of compressor

Notes:

- 1.The horn has to be work with more than 15A current, if the current is only 10A-15A, it may cause compressor didn't have enough power, which makes the sound low and strange.
2. The power supplies like car cigarette lighter/wall adaptor/ power strip are not recommended.
- 3.Please pay attention to the polarity of all parts.
- 4.Please incline the air horn downwards slightly while installing.
- 5.Air horn should be as short as possible to ensure efficient working of the air horn.

Default Warranty Period:1 year for Carfka Train Horn

Customer Support

If you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

Email: stservice03@163.com